

# Installation Instructions LINIER FIXED WALL MOUNT CABINETS

#### Part Numbers:

Solid Door

### Glass Door 6U - 3140-3-001-06 9U - 3140-3-001-09 12U - 3140-3-001-12 15U - 3140-3-001-15


18U - 3140-3-001-18 22U - 3140-3-001-22


6U - 3141-3-001-06
9U - 3141-3-001-09
12U - 3141-3-001-12
15U - 3141-3-001-15
18U - 3141-3-001-18
22U - 3141-3-001-22


Vented Door

6U - 3142-3-001-06
9U - 3142-3-001-09
12U - 3142-3-001-12
15U - 3142-3-001-15
18U - 3142-3-001-18
22U - 3142-3-001-22



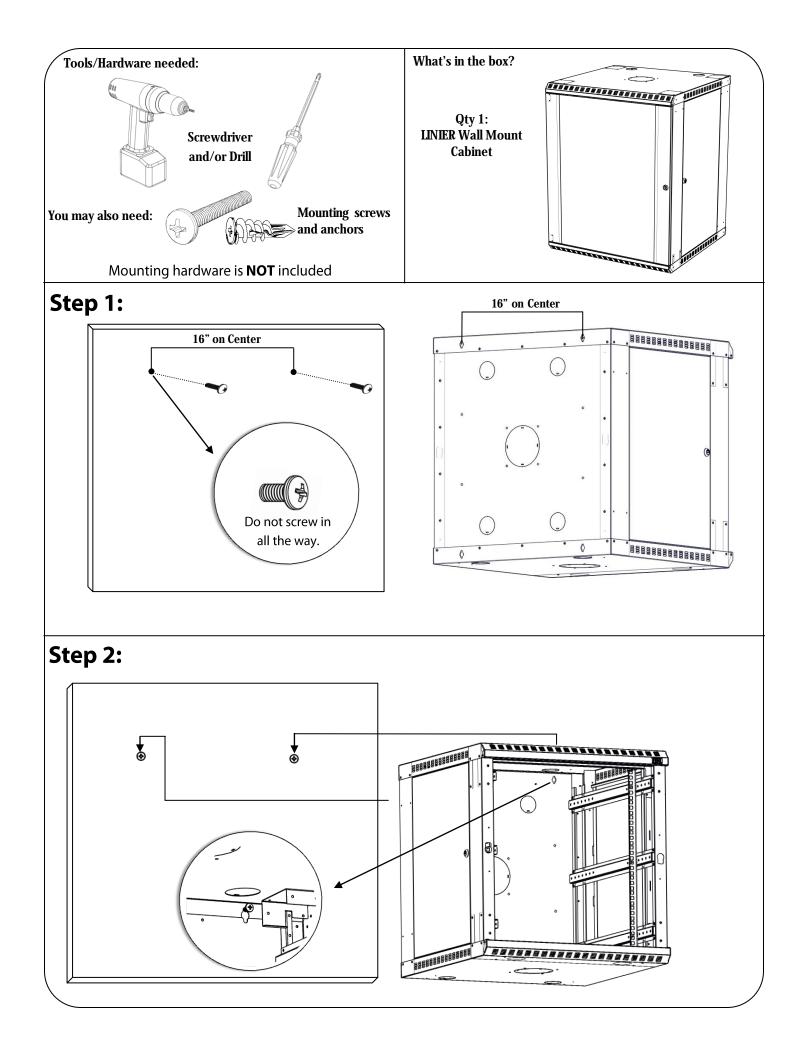

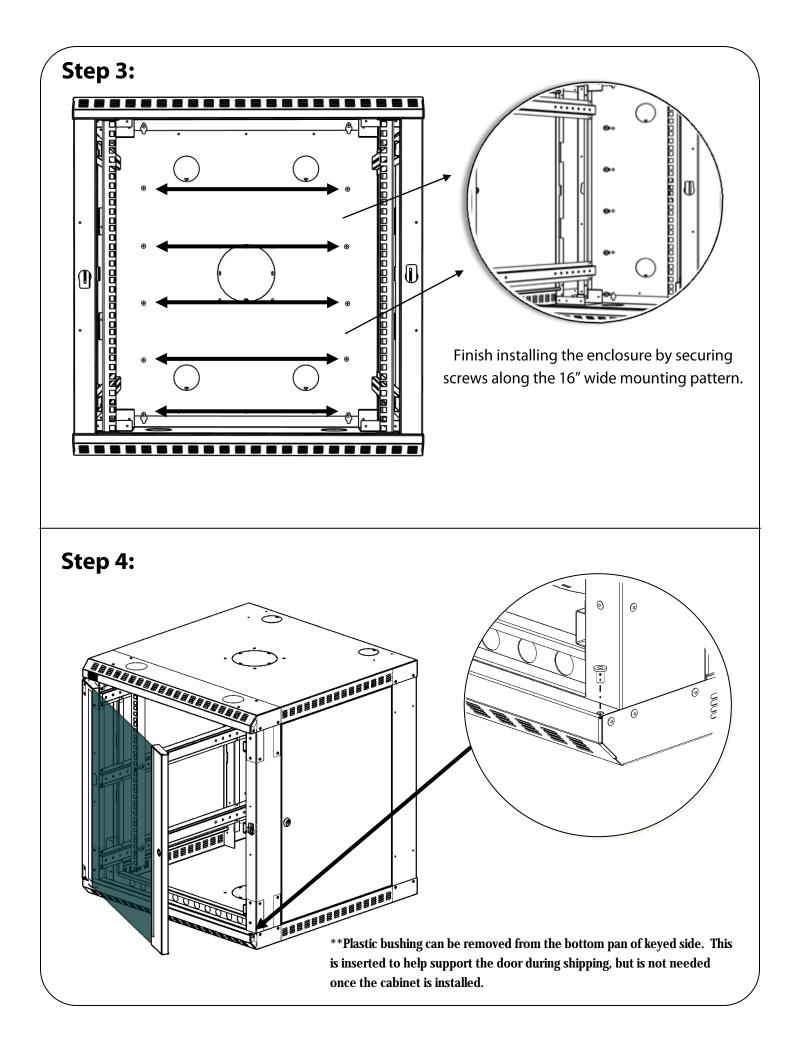


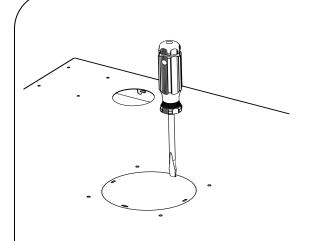

## **Removing Knock Outs**

1) Insert a flat head screwdriver into the small opening at the edge of the knock out.

2) Pry upwards and twist until insert breaks free.

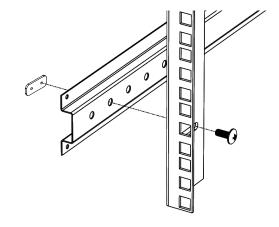

## Adjusting the Rail Depth

1) Unscrew the rail from the rail support. Move the rail forwards or backwards to desired location. Insert screw and secure.



Information Support Concepts, Inc. 6619 Beryl Drive, Suite 204 Arlington, TX 76002-5469 800-458-6255 Fax - (682) 410-0353 Phone - (682) 410-0354